

# WEBRelay™ Dual-III


## X-301™ Quick Start Guide

### Basic Setup Steps:


1. Connect the power supply to the Vin+ and Vin- terminals.  
*(Do not connect the power supply to the Vout and Gnd.)*
2. Connect the X-301 to your local network.
3. Set up a computer on the same network as the X-301.  
To do this, set the IP address of the computer to 192.168.1.50 with a netmask of 255.255.255.0.
4. Configure the X-301 using a web browser. Do this by pointing browser to: <http://192.168.1.2/setup.html>  
Username is **admin** and password is **webrelay** (all lower case).
5. Set the permanent IP address in the Network tab and press Submit. Restart the X-301 (remove power, re-apply power).
6. After restarting the X-301, set the computer back to its original settings and access the X-301 at its new IP address you set in the Network tab.
7. Connect relay contacts.

### Factory Default Settings

IP Address: 192.168.1.2  
 Subnet Mask: 255.255.255.0  
 Control Web Address: <http://192.168.1.2>  
 Setup Web Address: <http://192.168.1.2/setup.html>  
 Setup Username: admin  
 Setup Password: webrelay (all lower case)  
 Control Password: no password set

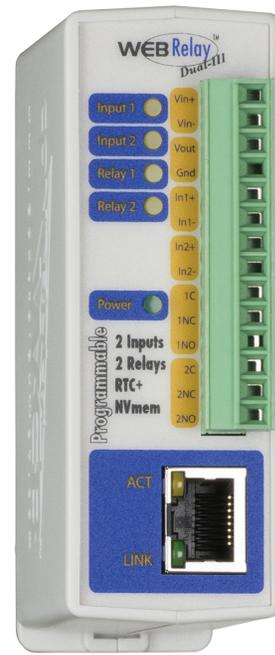

### Pinout

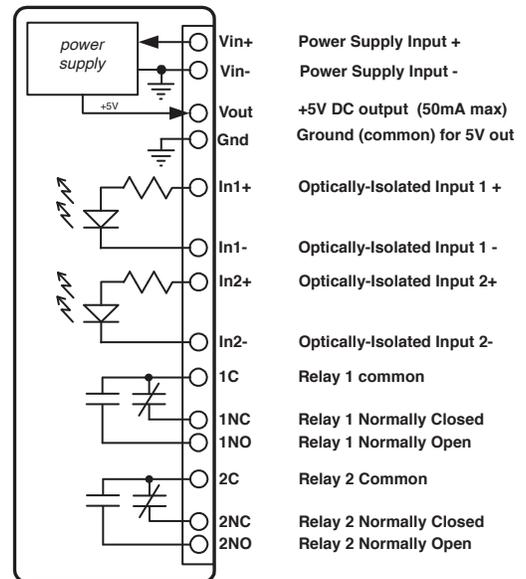

**Note:** The X-301 can be configured to operate at 10Mbps or 100Mbps. For best power savings and long term performance the 10Mbps setting is recommended.

**CONTROLbyWEB™**  
[www.ControlByWeb.com](http://www.ControlByWeb.com)

a division of...  
 Xytronix Research & Design, Inc.  
 Nibley, Utah, USA

For technical support, email questions to [support@ControlByWeb.com](mailto:support@ControlByWeb.com)  
 Full Users Manual may be downloaded from <http://www.ControlByWeb.com>