

WARD. Our ward refrigerators are designed specifically for ward use and offer the safe and reliable storage of fresh food and beverages. With hygiene of extreme importance, all of our ward refrigerators conform to the requirements of Food Hygiene Regulations by maintaining an internal temperature of between +1°C and +5°C.



WR907

Efficiency

Forced air cooling on all models provides optimum temperature stability and rapid temperature recovery after door openings. Fully automatic defrosting takes away the need for manual involvement.

Control

An easy to use external control panel and digital temperature display ensures continuous monitoring without having to open the door.

Security

All of the ward refrigerators are fully lockable and two keys are provided, preventing unauthorised access at all times.

Environment

Low energy consumption and being CFC free makes all Lec Medical ward refrigerators kinder to the environment.



WARD. Lec Medical's range of ward refrigeration offers something for all requirements. From the compact WR207 for smaller wards through to the larger WR907 which is suitable for even the busiest of wards.

Control and Efficiency

The neat, integral digital control panel on the outside of the fridge is easy to use and makes checking the internal temperature straightforward. As there is no need to open the door to check the temperature, it keeps the internal air temperature more stable.

All temperature ward fridges have fans delivering optimum temperature stability and a faster temperature recovery after door openings.

Automatic defrost ensures more efficient cooling.

Security

Security is essential on all wards so all Lec Medical fridges come complete with door locks and two keys ensuring that only authorised individuals are able to access them.

A temperature alarm, which sounds if the temperature deviates outside of the set temperature, comes as standard, reducing the chance of ruining the contents of the refrigerator.

The auxiliary output* gives the user the option of connecting support systems such as a mains failure alarm signal.

Flexibility

Reversible doors across all models give greater flexibility where space is at a premium or where positioning the product is specific.

Adjustable feet are also important when positioning the product on uneven surfaces.

Removable shelves and door furniture* gives maximum storage capacity.

Environmentally Friendly


All our products are CFC free with many being HFC free too. Lec Medical refrigeration products are some of the most efficient products in the market using both efficient refrigerants and high specification insulation to help drive down the energy cost for our customers.

WR207	SKU	444448570
	Product dimensions (mm)	502w x 540d x 660h
	Packed dimensions (mm)	520w x 595d x 675h
	Product weight (kg)	27.5
	Packed weight (kg)	30.5
	Net capacity (litres)	67
	Gross capacity (litres)	82
WR507	SKU	444448524
	Product dimensions (mm)	558w x 600d x 863h
	Packed dimensions (mm)	600w x 610d x 900h
	Product weight (kg)	34
	Packed weight (kg)	35.5
	Net capacity (litres)	137
	Gross capacity (litres)	153
WR907	SKU	444448525
	Product dimensions (mm)	595w x 600d x 1550h
	Packed dimensions (mm)	625w x 700d x 1610h
	Product weight (kg)	81.5
	Packed weight (kg)	84
	Net capacity (litres)	275
	Gross capacity (litres)	286

WR207



WR507

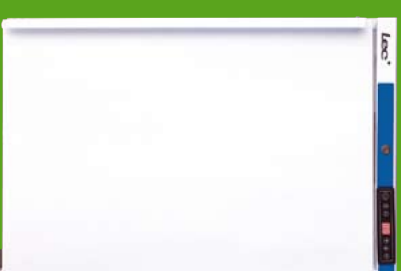

WR907

